


## JIM GREEN FOOTWEAR

FOOTWEAR WITH ATTITUDE

WORKWEAR AND HIKING RANGE







- Manufactured with a double layer of leather (2.2mm full grain leather, lined with 1.6mm calf leather)
- Double layer of leather aids in the boots water resistant properties (not waterproof)
- Ankle padding for excellent support, comfort and protection
- · Thermoplastic toe puff and a heel stiffener for extra support
- A steel shank between the insole board and sole offers extra support and stability
- Insole board is secured to the upper with a double stitched 2.2mm braided nylon cord
- · Sole is made from a genuine rubber and can be resoled
- · With the durability and lower cut around the ankle, the Bushcat is perfect for those on their haunches most part of the day or for those not requiring the additional ankle support of the Razorback.

## F3 STOCKMAN

- Perfect for those who are always on the move and a favorite amongst the farming community
- Manufactured with a double layer of leather (2.2mm full grain leather, lined with 1.6mm calf leather)
- Thermoplastic toe puff and a heel stiffener for extra support
- · A steel shank between the insole board and sole offers extra support and stability
- Insole board is secured to the upper with a double stitched 2.2mm braided nylon cord
- Accommodates a wider foot with a roomy toe box
- Sole is made from a genuine rubber and can be resoled




## MO373 MONSTER WATERPROOF




- Manufactured with 2.2mm leather, lined with waterproof lining makes this boot 100% waterproof
- Waterproof lining provides a cool, dry comfort feel with anti-odor and anti-bacterial properties
- · Extra thick ankle padding for excellent support, comfort
- Thermoplastic toe puff and a heel stiffener for extra support
- Lockable eyelets to secure lace pattern and hold your feet
- · Thermo plastic midsole to enhance performance, stability and protection
- Monster sole is made from a pure rubber
- This boot can be resoled but we can't guarantee the waterproof properties thereafter
- The combination of all components used, makes the Monster waterproof our top of the range boot





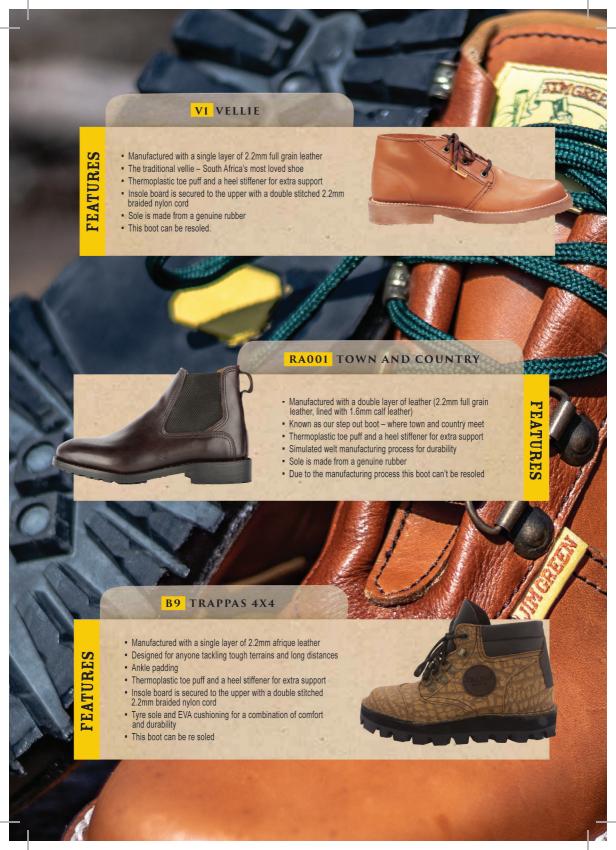



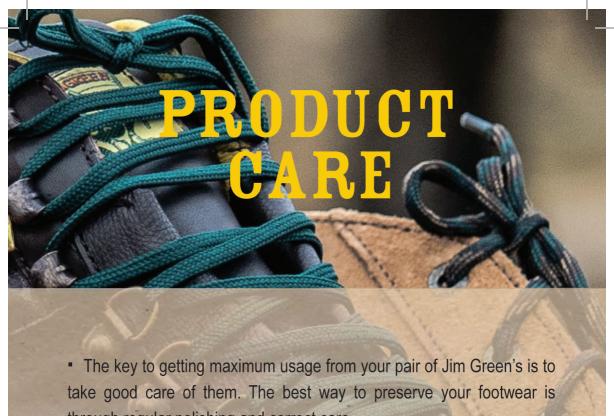

- through regular polishing and correct care.
- Do not dry near a fire, heater or in direct sunlight when boots are wet stuff with newspaper, shape and leave to dry naturally. When dry, polish.
- We recommend a bees wax or any natural shoe polish found at your local store. Regular polishing also seals the leather, aiding the boots water resistant qualities.



